


How to Measure

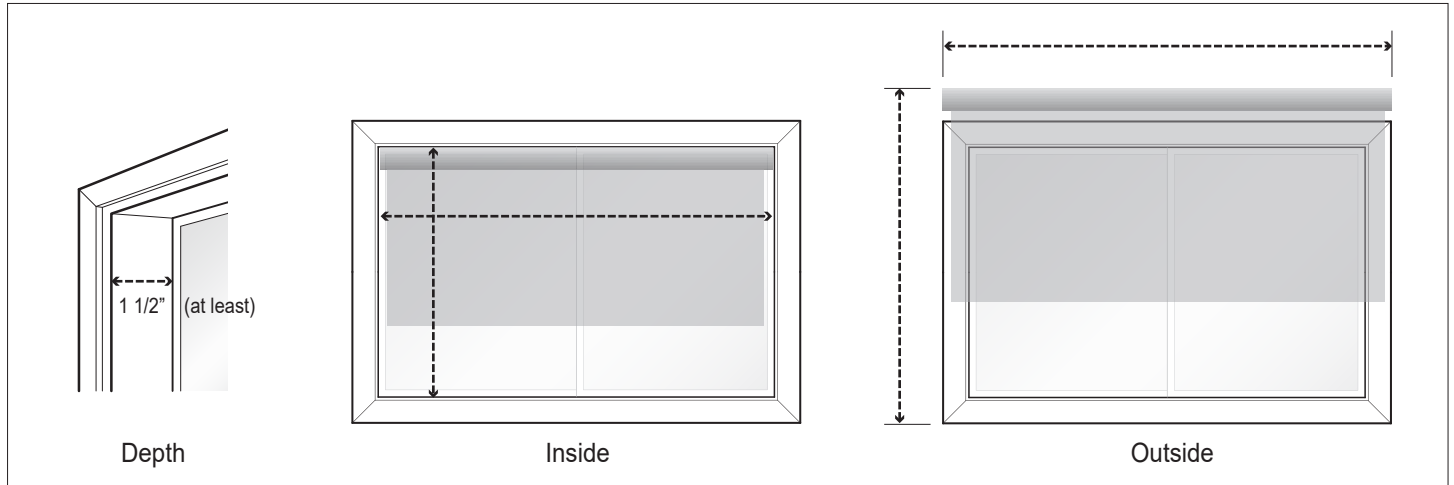

Decide whether you want the blind to be installed **Inside** or **Outside** of the window frame.

Inside

1. Make sure your window frame depth is **at least 1 1/2"** in order to install the blind inside frame.
2. Measure exact window width at top, middle, and bottom.
3. Use the Narrowest Width.
4. Measure exact window height at left, middle, and right side.
5. Use Longest Height.

Outside

Determine exact place you want to mount the blinds. For example, you may choose to mount on the Wall Above Molding or Directly Onto the Surface of the Molding.

Wall Above

1. Measure width to be covered, including desired overlap for light control and privacy. We recommend adding **3"** to each side for overlap.
2. Measure height to be covered, including desired overlap below the window opening for light control and privacy as well as the space your mounting brackets or upper cassette will need above the window opening. We recommend **adding 3"** to the height.

Directly Onto the Surface of the Molding

1. Measure width from outer edge to outer trim. **DO NOT MAKE** additions.
2. Measure height from the top of the trim to where you would like the shade to cover at the bottom.